

Plug and Play Wireless CPU[®]

Fastrack GO User Guide

Reference: WA_DEV_Fastrk_GO_001

Revision: 001

Date: March 16, 2009

Document History

Revision	Date	List of revisions	
001	March 16, 2009	First Issue	

Overview

Fastrack GO is a cellular Plug & Play Wireless CPU® offering state-of-the-art GSM/GPRS connectivity for machine to machine applications.

Thanks to Fastrack GO, you can connect your wired or disconnected devices together to transfer collect data or control your equipment remotely. . Fastrack GO with its stylish, ergonomic and attractive design, comes in two different connecting interface RS232 and USB.

Fully certified, the quad band 850/900/1800/1900 MHz Fastrack GO offers GPRS Class 10 capability.

Fastrack GO is controlled by firmware through a set of AT commands.

Fastrack GO is suitable for wide voltage range and low power consumption type of applications.

FASTRACK GO offers the easiest integration and upgrading and above all the quickest time to market : turn on the power and off you go!

This document describes the Fastrack GO and gives information on the following topics :

- general information,
- functional description,
- basic services available,
- technical characteristics,
- installing and using the Fastrack GO
- user-level troubleshooting.
- recommended accessories to be used with the product.

RoHS Directive

The Fastrack GO is now compliant with RoHS Directive 2002/95/EC, which sets limits for the use of certain restricted hazardous substances. This directive states that "from 1st July 2006, new electrical and electronic equipment put on the market does not contain lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE)".

Plug & Plays which are compliant with this directive are identified by the RoHS logo on their label.



Disposing of the product

This electronic product is subject to the EU Directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). As such, this product must not be disposed off at a municipal waste collection point. Please refer to local regulations for directions on how to dispose off this product in an environmental friendly manner.



Trademarks

 ,  ,  , inSIM[®], “YOU MAKE IT, WE MAKE IT WIRELESS”[®], WAVECOM[®], Wireless Microprocessor[®], Wireless CPU and certain other trademarks and logos appearing on this document, are filed or registered trademarks of Wavecom S.A. in France and/or in other countries. All other company and/or product names mentioned may be filed or registered trademarks of their respective owners.

Copyright

This manual is copyrighted by WAVECOM with all rights reserved. No part of this manual may be reproduced, modified or disclosed to third parties in any form without the prior written permission of WAVECOM.

No Warranty/No Liability

This document is provided “as is”. Wavecom makes no warranties of any kind, either expressed or implied, including any implied warranties of merchantability, fitness for a particular purpose, or noninfringement. The recipient of the documentation shall endorse all risks arising from its use. In no event shall Wavecom be liable for any incidental, direct, indirect, consequential, or punitive damages arising from the use or inadequacy of the documentation, even if Wavecom has been advised of the possibility of such damages and to the extent permitted by law.

Web Site Support

General information about Wavecom and its range of products:	www.wavecom.com
Specific support is available for the Fastrack GO Plug & Play Wireless CPU®:	www.wavecom.com/fastrackGO
Developer community for software and hardware:	www.wavecom.com/forum

Contents

DOCUMENT HISTORY	2
OVERVIEW	3
WEB SITE SUPPORT	6
CONTENTS	7
LIST OF FIGURES.....	10
LIST OF TABLES	11
1 PACKAGING	13
1.1 Contents of Fastrack Go version RS232	13
1.2 Contents of Fastrack Go version USB	13
1.3 Packaging Box	14
1.4 Product serigraphy	14
1.5 Production Labelling	15
2 GENERAL DESCRIPTION	16
2.1 Fastrack GO versions RS232	16
2.2 Fastrack GO version USB	16
3 FEATURES AND SERVICES	18
4 USING THE FASTRACK GO.....	20
4.1 Getting Started	20
4.1.1 Mount the Fastrack GO	20
4.1.2 Insert/extract the SIM card to/from the Fastrack GO	20
4.1.3 Set up the Fastrack GO	20

4.1.4	Activating USB communication (For Fastrack Go version USB only)	21
4.1.5	Set up serial communication Software.....	24
4.1.6	Verify the Fastrack GO Network Registration	25
4.1.7	Connecting to Internet using GPRS.....	26
4.1.7.1	Configuring Modem on PC	26
4.1.8	Creating a New Network Connection on PC	30
4.1.9	Making a GPRS Connection	35
4.2	Fastrack GO Operational Status	37
5	FUNCTIONAL DESCRIPTION	41
	EU and US Band.....	41
5.1	41	
	Power Supply (For Fastrack GO version RS232 only)	41
5.2	41	
5.3	RS232 Serial Link (For Fastrack GO version RS232 only)	41
5.3.1	General Presentation.....	41
	Pin Description*	42
5.3.2	42	
5.4	USB Link (for Fastrack GO version USB only).....	43
5.4.1	General Presentation.....	43
6	TECHNICAL CHARACTERISTICS	45
6.1	Mechanical Characteristics	45
6.2	Electrical Characteristics	46
6.2.1	Power Supply (For Fastrack GO version RS232 only)	46
6.2.2	SIM Interface.....	47
6.2.3	RF Characteristics	47
6.2.3.1	Frequency Ranges	47
6.2.3.2	RF Performances	48
6.2.3.3	External Antenna.....	49
6.3	Environmental Characteristics	49
6.4	Conformity	50
6.4.1	Overvoltage.....	50

7	SAFETY RECOMMENDATIONS	51
7.1	General Safety.....	51
7.2	Vehicle Safety.....	52
7.3	Care and Maintenance	52
7.4	Your Responsibility	53
8	ONLINE SUPPORT	55

List of Figures

Figure 1: Complete package contents	13
Figure 2: Packaging box	14
Figure 3: Production Label	15
Figure 4: Fastrack GO general description	17
Figure 5: Fastrack GO holding bridles.....	17
Figure 6: SMA connector for antenna connection	17
Figure 7: Power supply connector	17
Figure 8: Sub HD 15-pin connector.....	17
Figure 9: IES connector for feature expansion	17
Figure 10: Power supply cable	17
Figure 11: SIM card lock feature.....	19
Figure 12: Fastrack GO mounting	20
Figure 13: Procedure for SIM card insertion	20
Figure 14: Procedure for SIM card extraction	20
Figure 15: Recommended power supply connection on trucks	37
Figure 16: Example of electrical connection which may dramatically damage the Fastrack GO.....	37
Figure 17: Functional architecture	41
Figure 18: RS232 Serial Link signals.....	42
Figure 19: Reset sequence diagram.....	44
Figure 20: Dimensioning diagram.....	45

List of Tables

.Table 1: Basic features of the Fastrack GO.....	18
Table 2: Fastrack GO operational status	37
Table 3: Mechanical characteristics.....	45
Table 4: Input characteristics	46
Table 5: SIM card characteristics	47
Table 6: Frequency ranges	47
Table 7: Receiver and transmitter RF performances	48
Table 8: External antenna characteristics.....	49
Table 9: Ranges of temperature	49

1 Packaging

1.1 Contents of Fastrack Go version RS232

The complete package content of the Fastrack GO version RS232 consists of (see):

- one packaging box (A),
- one Fastrack GO (B),
- One Antenna (C),
- one power supply (D)
- a mini notice (E) with:
 - a summary of the main technical features,
 - safety recommendations,
 - EC declaration of conformity.

Figure 1: Complete package contents

1.2 Contents of Fastrack Go version USB

The complete package content of the Fastrack GO version USB consists of (see):

- one packaging box (A),
- one Fastrack GO (B),
- One Antenna (C),
- a mini notice (D) with:
 - a summary of the main technical features,
 - safety recommendations,
 - EC declaration of conformity.

Figure 2: Complete package contents

1.3 Packaging Box

The packaging box is a carton box (see) with the following external dimensions:

- width: mm,
- height: mm,
- length: mm.

A packaging label is slicked on the packaging box cover and supports the:

- WAVECOM logo,
- Product reference (Fastrack GO),
- IMEI code
- 15-digit IMEI code

Figure 3: Packaging box

The packaging label dimensions are:

- height: mm,
- length: mm.

Note : Power supply will be packaged in individual boxes.

1.4 Product serigraphy

WEE and CE logo are serigraphied on the plastic moulding.

1.5 Production Labelling

A production label (see Figure 4) located at the Fastrack GO back side gives the following information:


- product reference (**Fastrack GO**),
- part number ,
- 15-digit IMEI code,

Figure 5: Production Label

2 General Description

2.1 Fastrack GO versions RS232

The Fastrack GO version RS232 description is given in the 5 below.

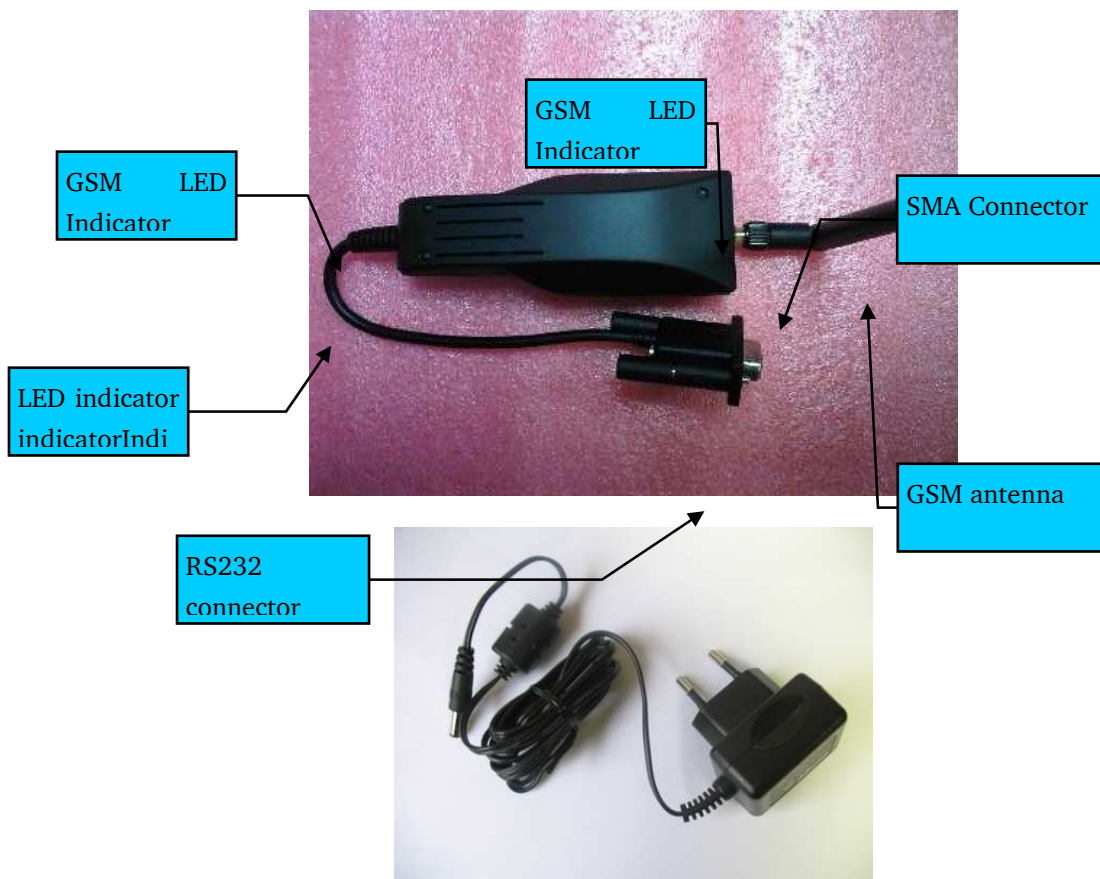

2.2 Fastrack GO version USB



Figure 5: Fastrack GO general description

3 Features and Services

Basic features of the Fastrack GO and available services are summarized in the table below.

Table 1: Basic features of the Fastrack GO

Features	GSM850 / GSM900	DCS1800 / PCS1900
Standard	850MHz / 900 MHz. E-GSM compliant. Output power: class 4 (2W). Fully compliant with ETSI GSM phase 2 + small MS.	1800 MHz / 1900MHz Output power: class 1 (1W). Fully compliant with ETSI GSM phase 2 + small MS.
GPRS	Class 10. PBCCH support. Coding schemes: CS1 to CS4. Compliant with SMG31bis. Embedded TCP/IP stack.	
Interfaces	RS232 (V.24/V.28) Serial interface supporting: ▪ Baud rate (bits/s): 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800 and 921600. ▪ Autobauding (bits/s): from 1200 to 921600. 1.8 V / 3 V SIM interface. AT command set based on V.25ter and GSM 07.05 & 07.07.	
SMS	Text & PDU. Point to point (MT/MO). Cell broadcast.	

Features	GSM850 / GSM900	DCS1800 / PCS1900
Data	Data circuit asynchronous. Transparent and Non Transparent modes. Up to 14.400 bits/s. MNP Class 2 error correction. V42.bis data compression.	
Fax	Automatic fax group 3 (class 1 and Class 2).	
GSM supplement services	Call forwarding. Call barring. Multiparty. Call waiting and call hold. Calling line identity. Advice of charge. USSD	
Other	DC power supply Real Time Clock with calendar Complete shielding	

4 Using the Fastrack GO

4.1 Getting Started

4.1.1 Mount the Fastrack GO

To mount the Fastrack GO on its support, use the adhesive band.

Figure 2: Fastrack GO mounting

4.1.2 Insert/extract the SIM card to/from the Fastrack GO

The SIM card is not reachable from the outside. The plastic cover has to be unscrewed below the FASTRACK GO to insert the SIM card. Please follow the procedure in Figure.

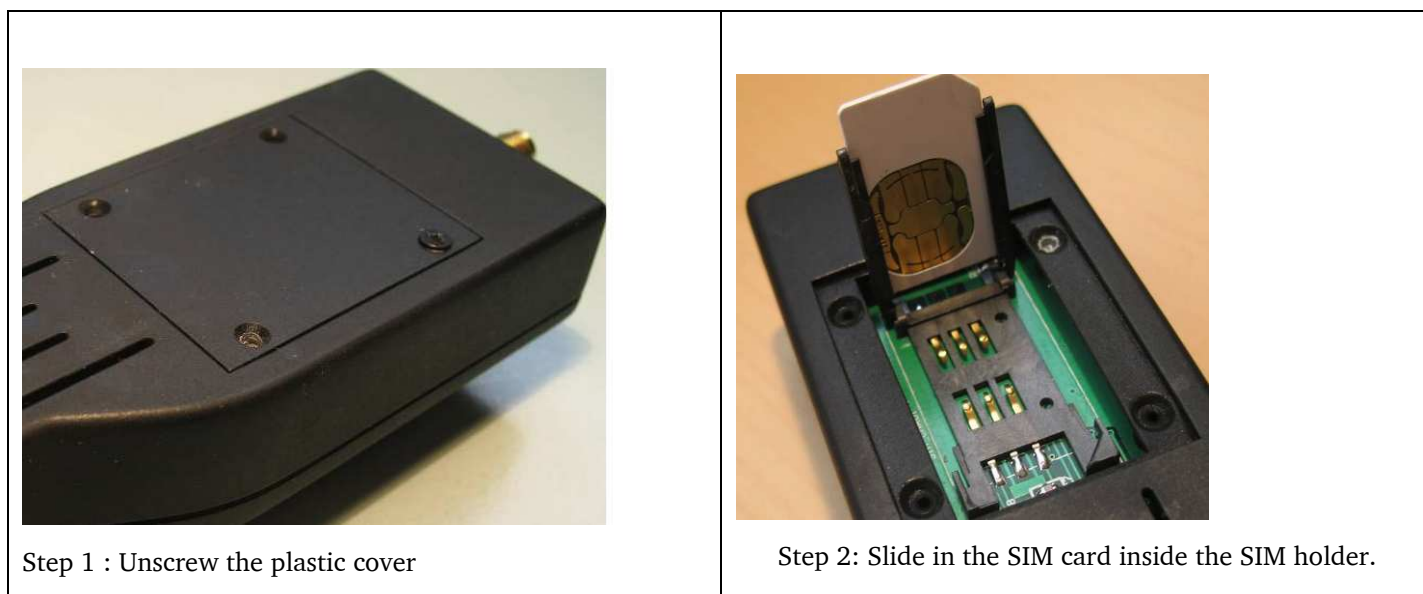


Figure 3: Procedure for SIM card insertion

4.1.3 Set up the Fastrack GO

To set up the Fastrack GO, perform the following operations:

- Insert the SIM card into the SIM card holder of the Fastrack GO.
- Connect the antenna to the SMA connector.


- Connect both sides of the serial and control cable (9-pin Sub HD connector on the Fastrack GO side) for the Fastrack Version RS232only.
- Connect USB cable to PC USB port for FAstrack version USB only
- Connect Fastrack GO version RS232 only to the external power supply
- The Fastrack GO is ready to work. Refer to Section 1 for the description of AT commands used to configure the Fastrack GO.

4.1.4 Activating USB communication (For Fastrack Go version USB only)




Activating USB

1. “Found New Hardware Wizard” window appears
2. Select “Yes, this time only”
3. Press “Next”

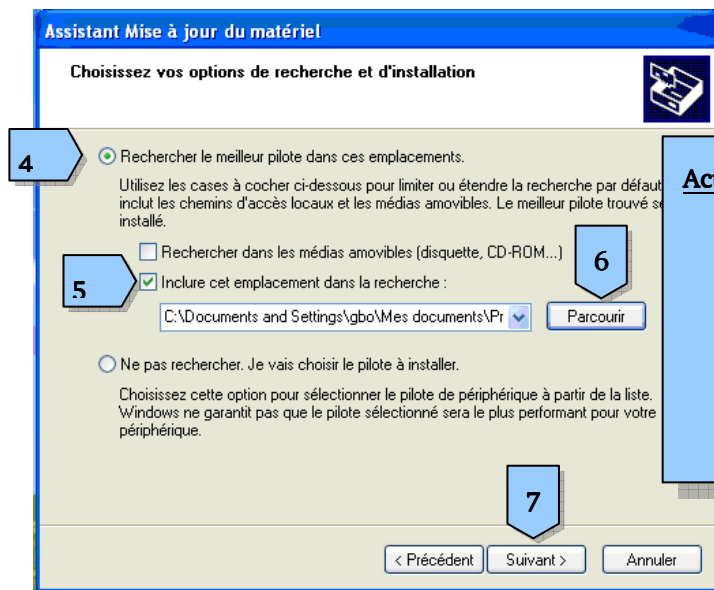


Activating USB

4. "Select "Search for the best driver in these locations"
5. " Select "Include these location in the search"
6. " Browse (to the driver location)"
7. Press "Next"

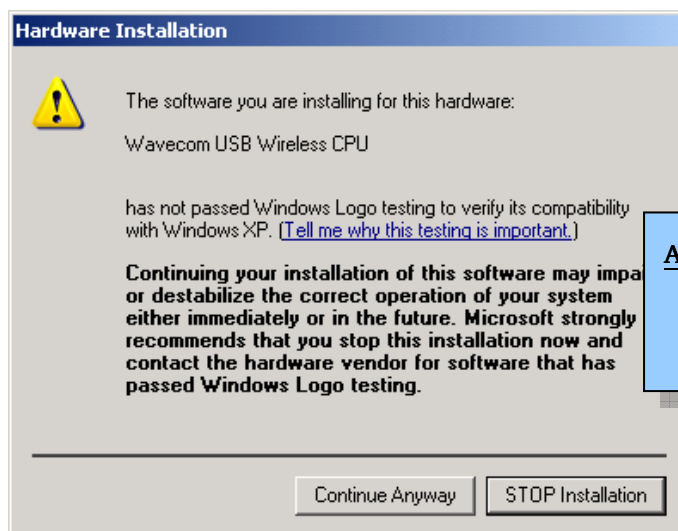


Activating USB

1. Press "continue Anyway"

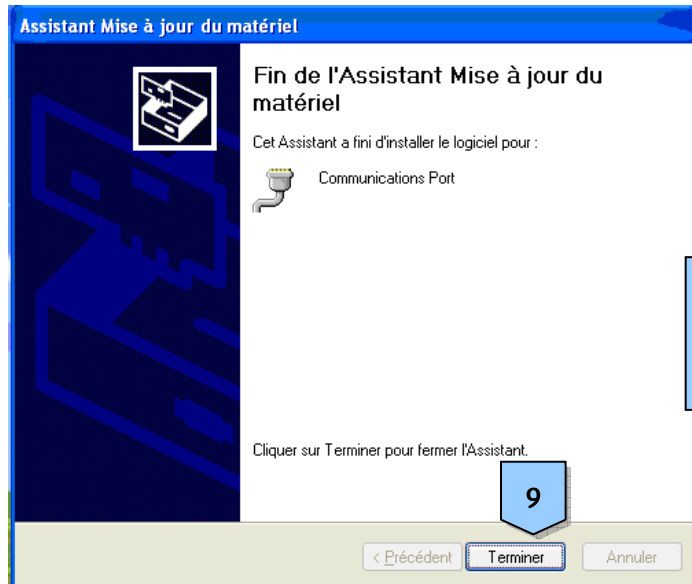

Activating USB

8. Press "Finish" to end the driver

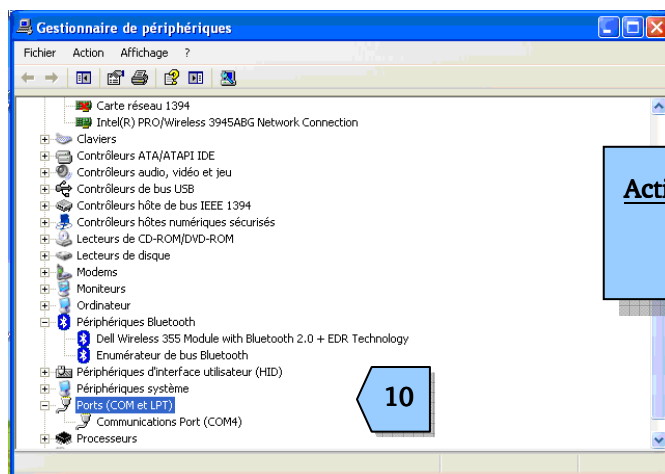

Activating USB

9. COM port allocated

4.1.5 Set up serial communication Software

Open Hyperterminal

1. Select "Properties"
2. Select the appropriate COM port
3. Press "Configure"
4. Set the following;
 - Bits per second: 115200
 - Data bits: 8

Displays the properties of the current

COM1 Properties

Port Settings

Bits per second: 115200

Data bits: 8

Parity: None

Stop bits: 1

Flow control: None

Restore Defaults

OK Cancel Apply

4.1.6 Verify the Fastrack GO Network Registration

Verify the State of Registration

1. Enter “AT+CREG?” to ascertain the registration status
2. Enter “AT+CSQ” to verify the received signal strength. 10 to 32 is optimum. Below 10 may not be acceptable for a

Returned Value (*) +CREG: <mode>,<stat>	Network registration
+CREG: 0,0	No (not registered)
+CREG: 0,1	Yes (registered, home network)
+CREG: 0,5	Yes (registered, roaming)

If the Fastrack GO is not registered, perform the following procedure:

1. Check your SIM card installation and make sure the account is valid for voice and data.
2. Check your antenna connections and your serial connections.
3. Check your Network Band with “AT+WMBS?”, the default setting is at GSM900/DCS1800.

Returned Value (*) +WMBS: <Band>,<ResetFlag>	Network registration
+WMBS: 5,0	Dual Band mode 900E (extended)/1800 MHz
+WMBS: 4,0	Dual Band mode 850/1900 MHz

(*) For further information on the other return values and their meaning, refer to “AT Commands Interface Guide”.

4. To set to the desired GSM Band enter the appropriate AT Command


AT Command	Network registration
AT+WMBS=5	Sets to Dual Band mode 900E (extended)/1800 MHz
AT+WMBS=4	Sets to Dual Band mode 850/1900 MHz

For further information, refer to “AT Commands Interface Guide” at this path

4.1.7 Connecting to Internet using GPRS

4.1.7.1 Configuring Modem on PC


Open the control panel on the PC

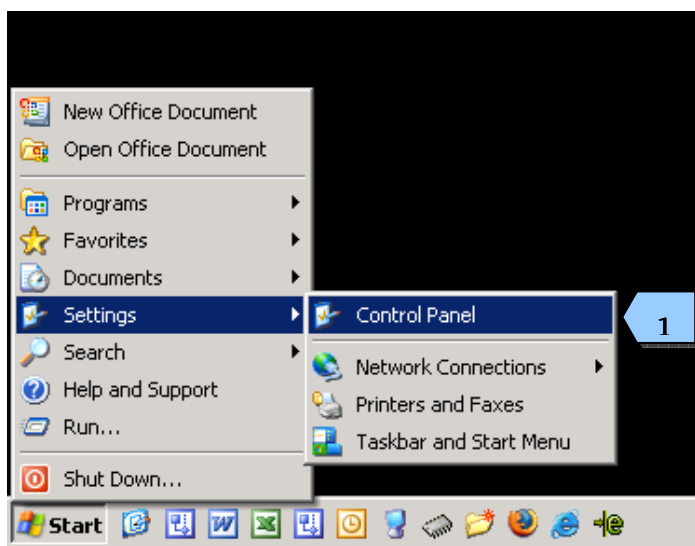


Configuring Modem on PC

1. Open the control panel on the PC.
2. On the control panel window select “Phone and Modem Options”



Fastrack GO User Guide

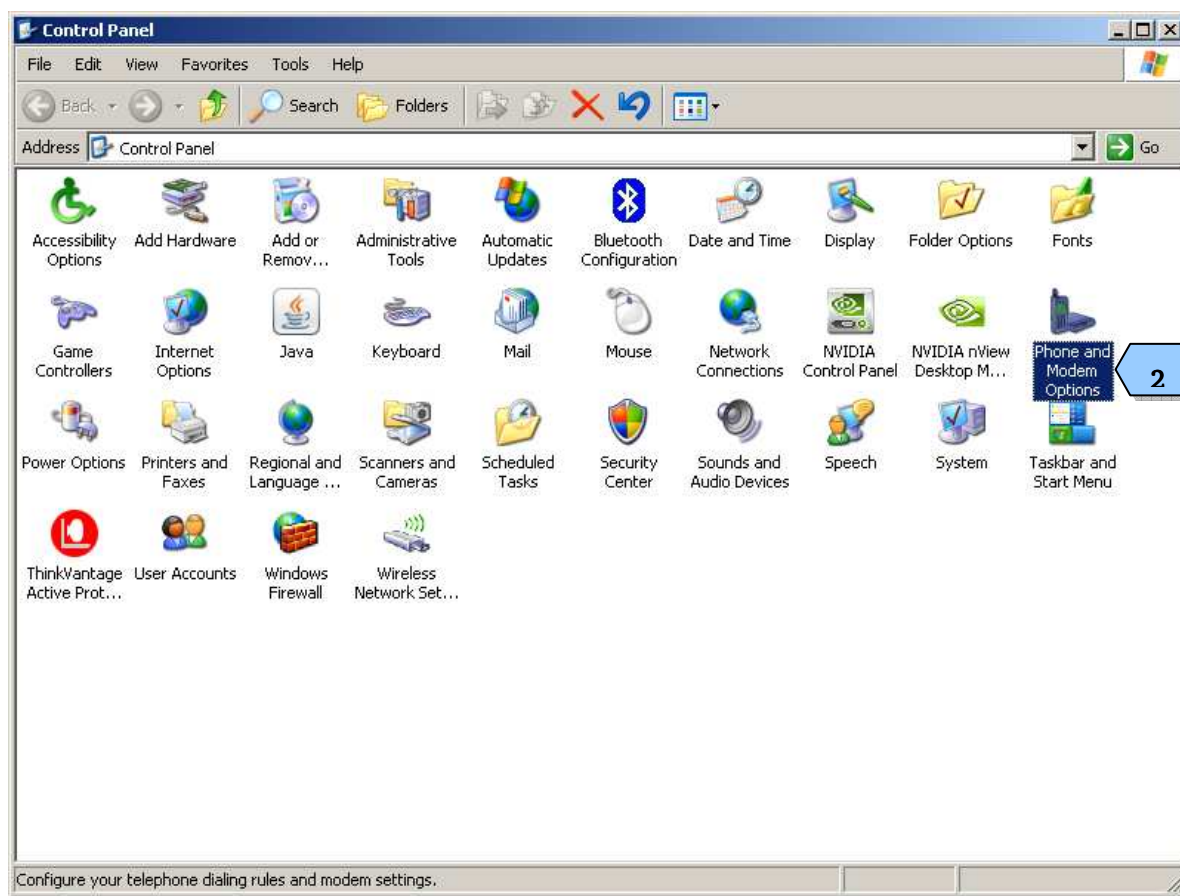


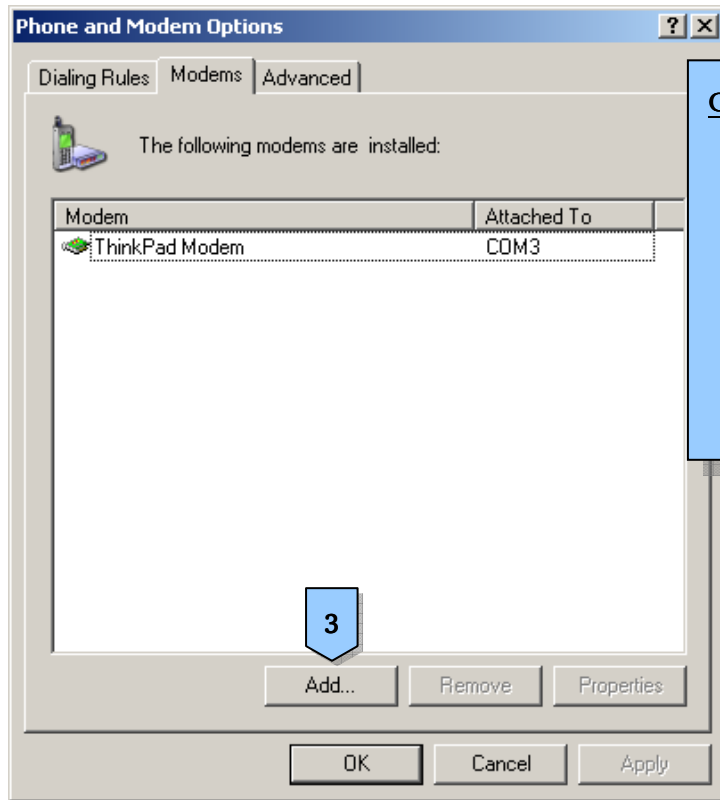

Configuring Modem on PC



3. Select "Add"
4. Select "Don't detect my modem, I select it from a list"
5. Select "Next"
6. On the standard modem types, select "Standard 56000 bps Modem"

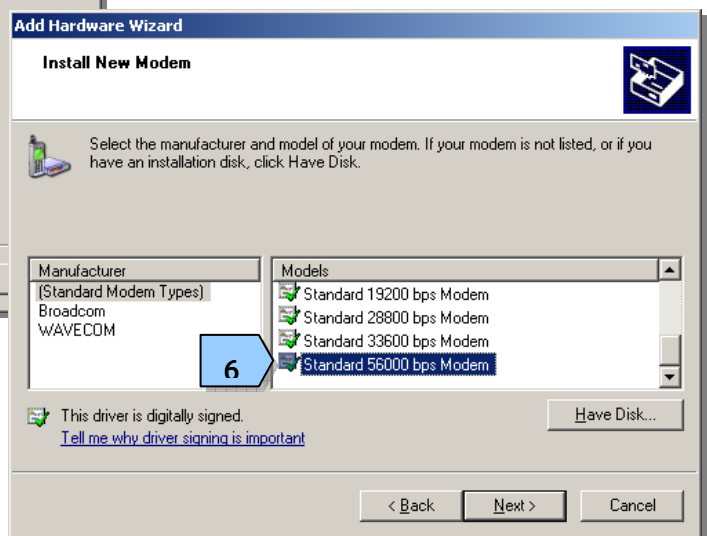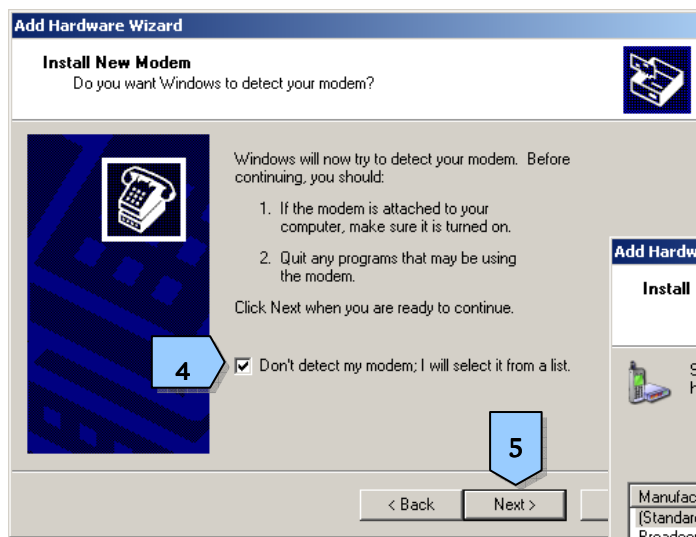

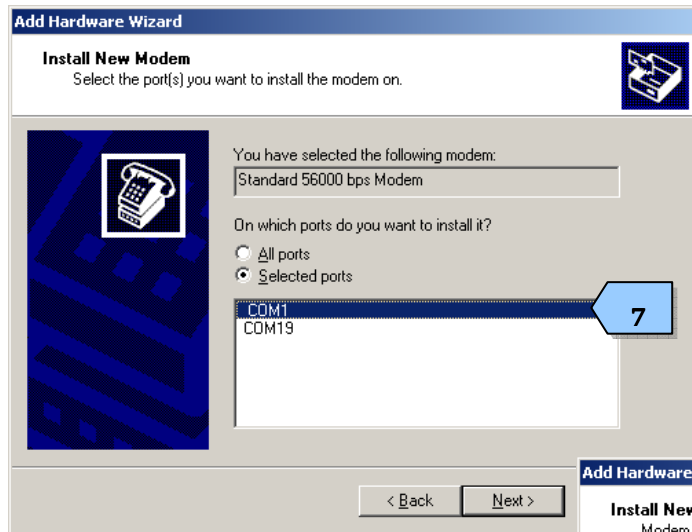



Configuring Modem on PC

7. Select which port the modem will use.
8. Select "Finish" to complete the configuration.
9. On the "Phone and Modem Options" pop-up window will show the new added modem

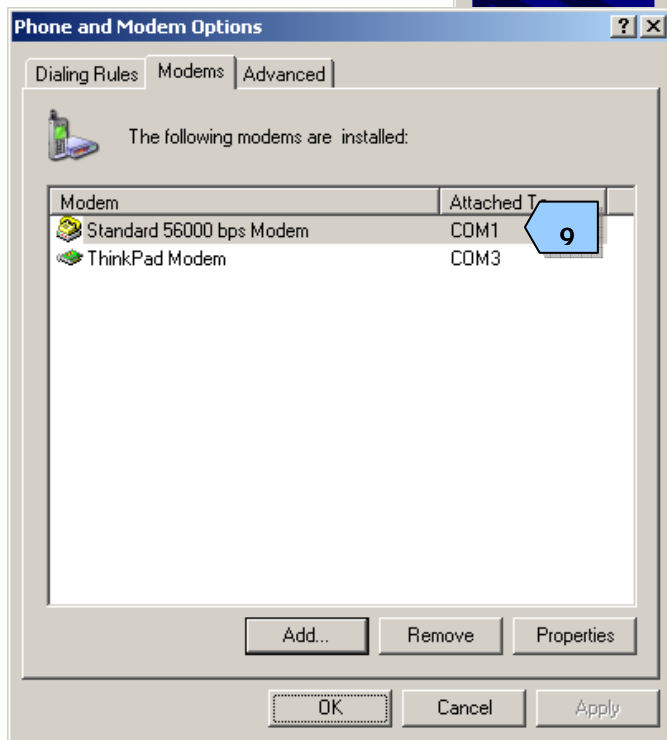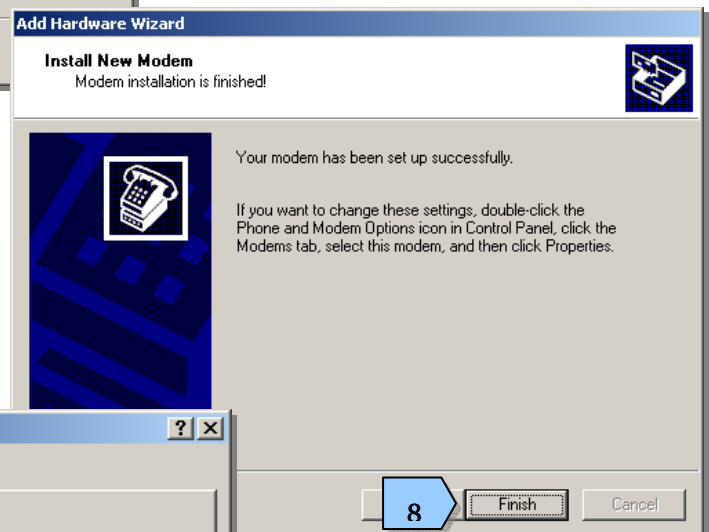


4.1.8 Creating a New Network Connection on PC

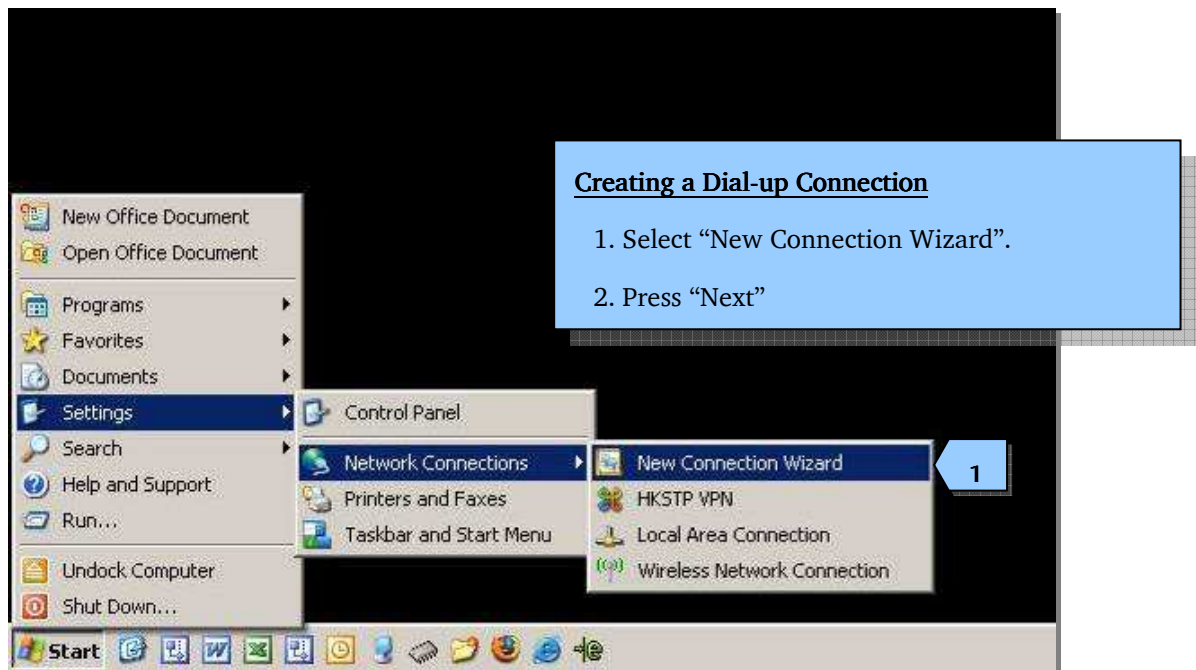

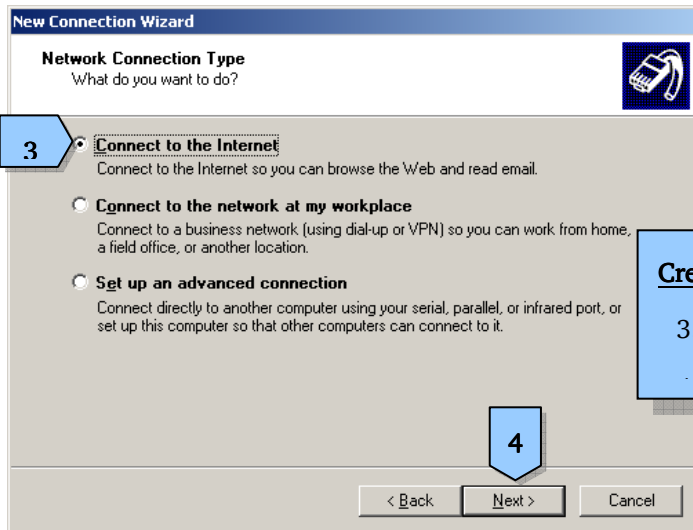

Creating a Dial-up Connection

3. Select "Connect to the Internet"

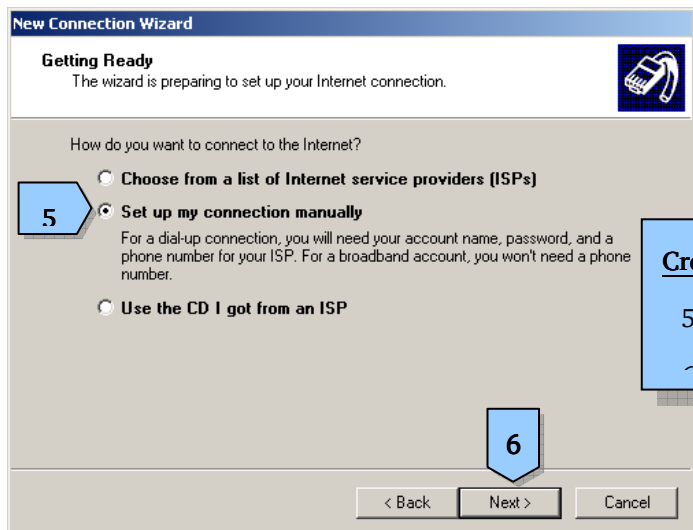

Creating a Dial-up Connection

5. Select "Connect to the Internet"

New Connection Wizard

Internet Connection
How do you want to connect to the Internet?

7

- ☒ **Connect using a dial-up modem**
This type of connection uses a modem and a regular or ISDN phone line.
- ☐ **Connect using a broadband connection that requires a user name and password**
This is a high-speed connection using either a DSL or cable modem. Your ISP may refer to this type of connection as PPPoE.
- ☐ **Connect using a broadband connection that is always on**
This is a high-speed connection using either a cable modem, DSL or LAN connection. It is always active, and doesn't require you to sign in.

8

< Back **Next >** Cancel

Creating a Dial-up Connection

- 7. Select "Connect to the Internet"
- 8. Press "Next"

New Connection Wizard

Connection Name
What is the name of the service that provides your Internet connection?

Type the name of your ISP in the following box.

ISP Name

9

My ISP


The name you type here will be the name of the connection you are creating.

10

< Back **Next >** Cancel


Creating a Dial-up Connection

- 9. Enter your preferred ISP Name
- 10. Press "Next"

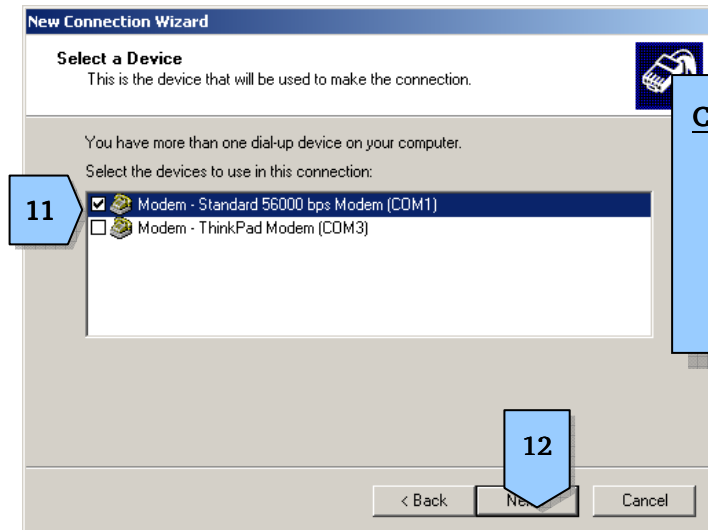

Creating a Dial-up Connection

11. Select the previously created modem device.
12. Press "Next"

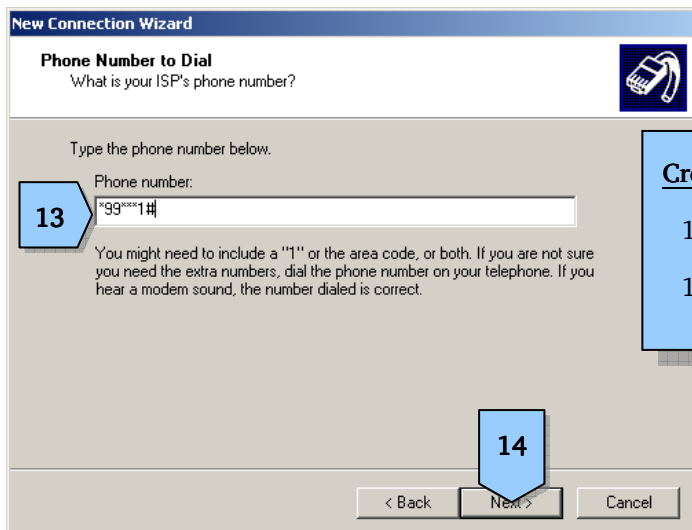

Creating a Dial-up Connection

13. Enter "*99***1#"
14. Press "Next"

New Connection Wizard

Connection Availability
You can make the new connection available to any user or only to yourself.

A connection that is created for your use only is saved in your user account and is not available unless you are logged on.

Create this connection for:

15 ☒ Anyone's use
☐ My use only

16

< Back Next > Cancel

Creating a Dial-up Connection

15. Select "Anyone's use"
16. Press "Next"

New Connection Wizard

Internet Account Information
You will need an account name and password to sign in to your Internet account.

Type an ISP account name and password, then write down this information and store it in a safe place. (If you have forgotten an existing account name or password, contact your ISP.)

User name:

Password:

Confirm password:

☒ Use this account name and password when anyone connects to the Internet from this computer

☒ Make this the default Internet connection

17

< Back Next > Cancel

Creating a Dial-up Connection


17. Press "Next"



Creating a Dial-up Connection



18. Select "Add a shortcut to this connection to my desktop"
19. Press "Finish" to end the configuration


4.1.9 Making a GPRS Connection

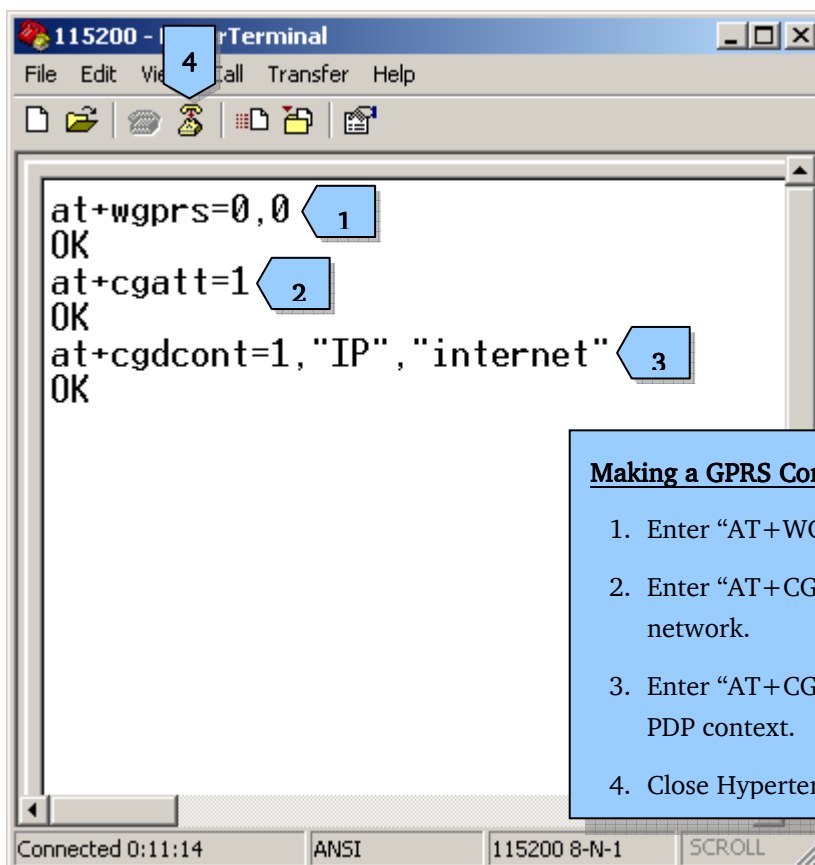

Making a GPRS Connection

1. Enter "AT+WGPRS=0,0"
2. Enter "AT+CGATT=1", to manually attach to network.
3. Enter "AT+CGDCONT=1,"IP","internet", sets the PDP context.
4. Close Hyperterminal

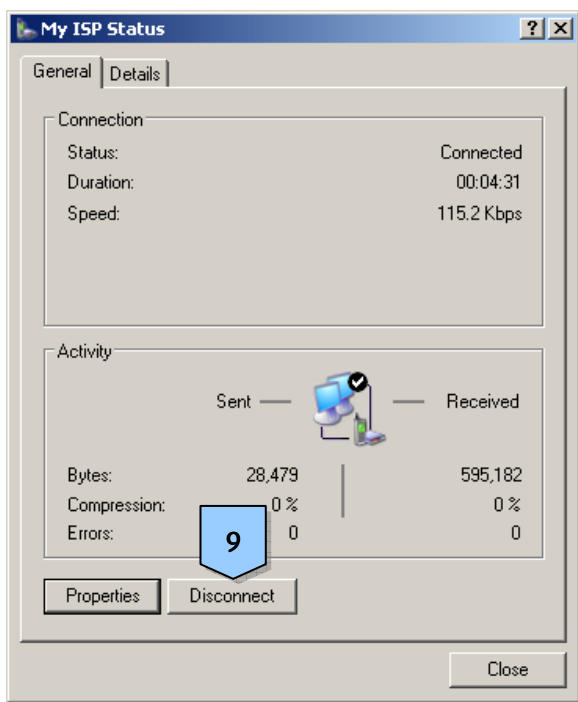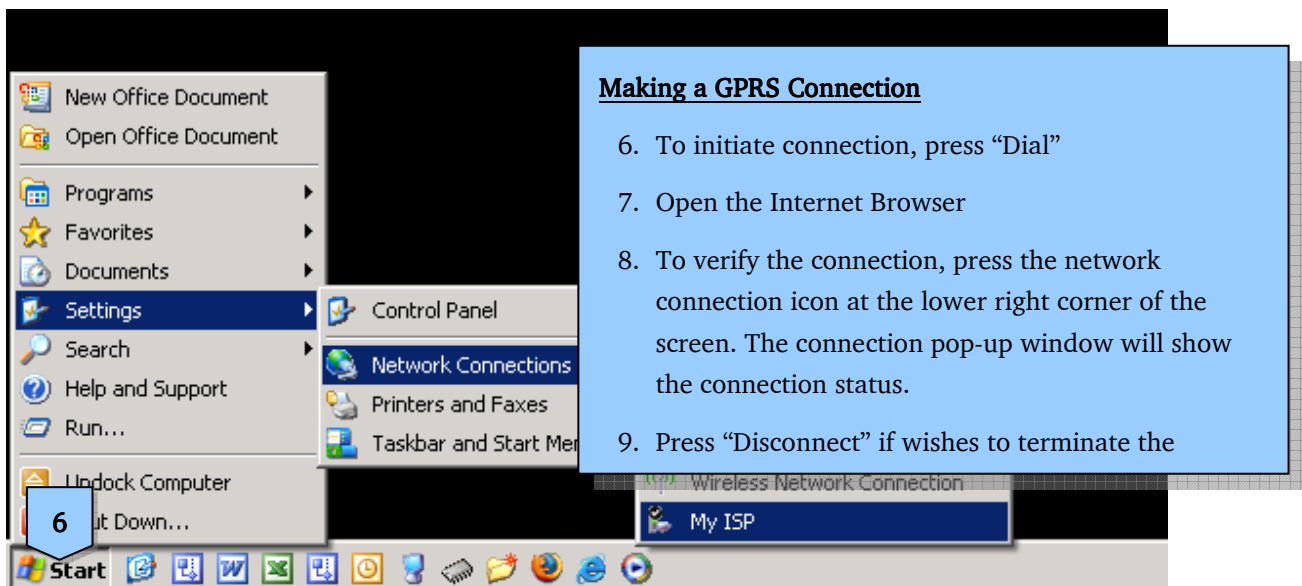

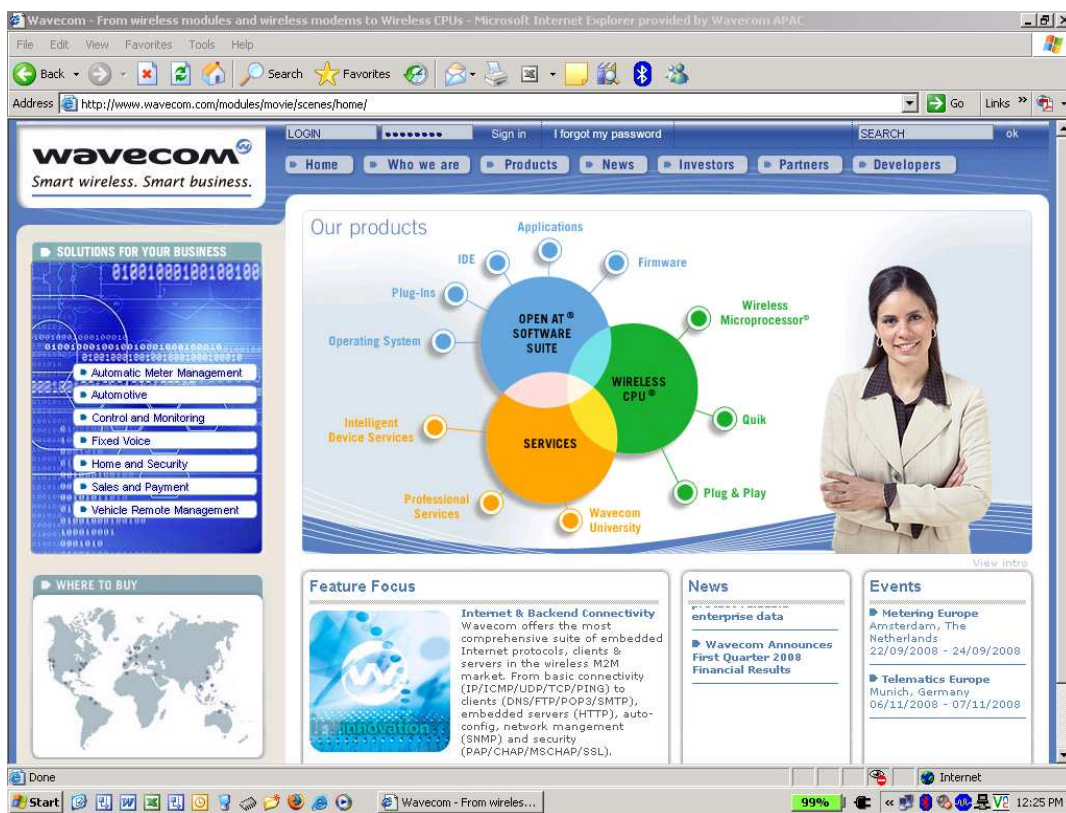

4.2 Fastrack GO Operational Status

The Fastrack GO operational status is given by the 3 LEDs status located on the Fastrack GO panel.

The Table 2 below gives the meaning of the various statuses available.

Table 2: Fastrack GO operational status

LED light activity	LED light activity	Fastrack GO status
red LED	LED ON permanent	
	LED OFF	
	LED ON permanent	

	LED OFF	
Green LED	LED ON permanent	
	LED OFF	

5 Functional Description

Figure 4: Functional architecture

5.1 EU and US Band

The Fastrack GO is a quad band Plug & Play. It supports either EU bands (EGSM900/DCS1800) or US bands (GSM850/ PCS1900), depending on the band setting within the Plug & Play. Users are free to switch between EU bands and US bands by simple AT commands when the selected bands are supported.

5.2 Power Supply (For Fastrack GO version RS232 only)

The Fastrack GO is supplied by an external DC voltage (V+BATTERY) from +7 V to +25 V at 2.2 A.

Correct operation of the Fastrack GO in communication mode is not guaranteed if input voltage (V+BATTERY) falls below 5.5 V.

5.3 RS232 Serial Link (For Fastrack GO version RS232 only)

5.3.1 General Presentation

UART Interface

- Hardware handshaking
- Supports odd, even, mark, space or no parity
- Baud rates: 300 bps to 115200 bps

The RS232 interface performs the voltage level adaptation (V24/CMOS $\Leftrightarrow$ V24/V28) between the internal Fastrack GO Plug & Play (DCE) and the external world (DTE).

The RS232 interface is internally protected (by ESD protection) against electrostatic surges on the RS232 lines.


Signals available on the RS232 serial link are:

- TX data

- RX data
- Request To Send ,
- Clear To Send,
- Data Terminal Ready ,
- Data Set Ready,
- Data Carrier Detect ,
- Ring Indicator .

RS232 interface has been designed to allow flexibility in the use of the serial interface signals. However, the use of TX, RX, CTS and RTS signals is mandatory, which is not the case for DTR, DSR, DCD and RI signals which can be not used.

5.3.2 Pin Description*

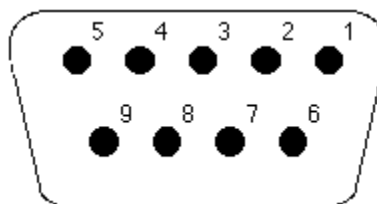

DB9 Female Connector

Signal	Sub HD connector Pin number	I/O	I/O type RS232 STANDARD	Description
CTXD	3	I	TX	Transmit serial data
CRXD	2	O	RX	Receive serial data
CRTS	7	I	RTS	Request To Send
CCTS	8	O	CTS	Clear To Send
CDSR	6	O	DSR	Data Set Ready
CDTR	4	I	DTR	Data Terminal Ready
CDCD	1	O	DCD	Data Carrier Detect
CRI	9	O	RI	Ring Indicator
GND	5		GND	Ground

5.4 USB Link (for Fastrack GO version USB only)

5.4.1 General Presentation

USB Function Controller

- USB 2.0 compliant, full-speed (12 Mbps)
- User programmable custom Baud rates
- Integrated transceiver
- Integrated precision clock
- Supports USB suspend states
- On-chip voltage regulator
- VCP drivers provided

The FASTRACK GO is compliant with the Universal Serial Bus Communication Device Class Abstract Control Model (USB CDC ACM) specification.

This is a generic driver which creates a Virtual COM port on your application.

6 Technical Characteristics

6.1 Mechanical Characteristics

Table 3: Mechanical characteristics

	Fastrack GO (version RS232)	Fastrack GO (version USB)
Dimensions	109 x 40 x 30 mm (excluding connectors)	109 x 40 x 30 mm (excluding connectors)
Weight	≈ 163g	≈ 74g
Housing	Plastic moulding	Plastic moulding

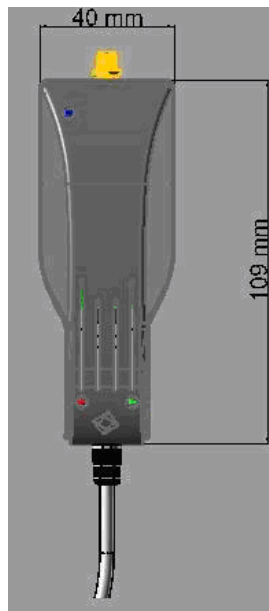


Figure 5: Dimensioning diagram

6.2 Electrical Characteristics

6.2.1 Power Supply (For Fastrack GO version RS232 only)

Table 4: Input characteristics

Rated input voltage	AC100V-240V
Vibration input Voltage Range	AC90V-255VAC
Frequency Rated	50-60Hz
Frequency vibration	47-63Hz
Input Rated Current	200mA RMS max
Inrush Current	15A Max at 115vac cool start
	30A Max at 230vac cool start
Leakage current	<0.25mA
Efficiency	65% Min

Table 6: output characteristics

Output Voltage	7.5VDC
Output Max Current	0.65A
Output Min Current	0A
Line Regulation	±1%
Load Regulation	±5%
Over Voltage Protection	8.6V to 9.6V DC (output shut down)

Short Circuit Protection	Output shutdown and auto restart
Ripple Voltage	150mV

6.2.2 SIM Interface

Table 5: SIM card characteristics

SIM card	1.8V / 3 V
----------	------------

6.2.3 RF Characteristics

6.2.3.1 Frequency Ranges

Table 6: Frequency ranges

Characteristic	GSM 850	E-GSM 900	DCS 1800	PCS 1900
Frequency TX	824 to 849 MHz	880 to 915 MHz	1710 to 1785 MHz	1850 to 1910 MHz
Frequency RX	869 to 894 MHz	925 to 960 MHz	1805 to 1880 MHz	1930 to 1990 MHz

6.2.3.2 RF Performances

RF performances are compliant with the ETSI recommendation GSM 05.05.

The RF performances for receiver and transmitter are given in the table below.

Table 7: Receiver and transmitter RF performances

Receiver	
E-GSM900/GSM850 Reference Sensitivity	-104 dBm Static & TUEHigh
DCS1800/PCS1900 Reference Sensitivity	-102 dBm Static & TUEHigh
Selectivity @ 200 kHz	> +9 dBc
Selectivity @ 400 kHz	> +41 dBc
Linear dynamic range	63 dB
Co-channel rejection	>= 9 dBc
Transmitter	
Maximum output power (E-GSM 900/GSM850) at ambient temperature	33 dBm +/- 2 dB
Maximum output power (DCS1800/PCS1900) at ambient temperature	30 dBm +/- 2 dB
Minimum output power (E-GSM 900/GSM850) at ambient temperature	5 dBm +/- 5 dB
Minimum output power (DCS1800/PCS1900) at ambient temperature	0 dBm +/- 5 dB

6.2.3.3 External Antenna

The external antenna is connected to the Fastrack GO via the SMA connector.

The external antenna must fulfill the characteristics listed in the table below.

Table 8: External antenna characteristics

Antenna frequency range	Quad-band GSM 850/GSM900/DCS1800/PCS1900 MHz
Impedance	50 Ohms nominal
DC impedance	0 Ohm
Gain (antenna + cable)	0 dBi
VSWR (antenna + cable)	2

Note: Refer to Section 0 for recommended antenna.

6.3 Environmental Characteristics

The Fastrack GO Plug & Play is compliant with the following operating class. To ensure the proper operation of the Fastrack GO, the temperature of the environment must be within a specific range as described in the table below.

Table 9: Ranges of temperature

No IESM Current Drain	
Conditions	Temperature Range
Operating / Class A	-20°C ~ +55°C
Operating / Class B ^{Note1}	-20°C ~ +70°C
Storage ^{Note1}	-40°C ~ +85°C

Function Status Classification:

Class A:

The Fastrack GO remains fully functional, meeting GSM performance criteria in accordance with ETSI requirements, across the specified temperature range.

Class B:

The Fastrack GO remains fully functional, across the specified temperature range. Some GSM parameters may occasionally deviate from the ETSI/PTCRB specified requirements and this deviation does not affect the ability of the Fastrack GO to connect to the cellular network and function fully, as it does within the Class A range.

6.4 Conformity

The complete product complies with the essential requirements of article 3 of R&TTE 1999/5/EC Directive and satisfied the following standards:

Domain	Applicable standard
Safety standard	EN 60950 (ed.1999)
Efficient use of the radio frequency spectrum	EN 301 419-(v 4.1.1) EN 301 511 (V 9.0.2)
EMC	EN 301 489-1 (edition 2002) EN 301 489-7 (edition 2002)
Global Certification Forum – Certification Criteria	GCF-CC V3.26.0
PTCRB	NAPRD.03 V3.11.0
FCC	FCC Part 15 FCC Part 22, 24
IC	RSS-132 Issue 2 RSS-133 Issue 3

Overvoltage

7 Safety Recommendations

7.1 General Safety

It is important to follow any special regulations regarding the use of radio equipment due in particular to the possibility of radio frequency (RF) interference. Please follow the safety advice given below carefully.

Switch OFF your Wireless CPU®:

- When in an aircraft. The use of cellular telephones in an aircraft may endanger the operation of the aircraft, disrupt the cellular network and is illegal. Failure to observe this instruction may lead to suspension or denial of cellular telephone services to the offender, or legal action or both,
- When at a refueling point,
- When in any area with a potentially explosive atmosphere which could cause an explosion or fire,
- In hospitals and any other place where medical equipment may be in use.

Respect restrictions on the use of radio equipment in:

- Fuel depots,
- Chemical plants,
- Places where blasting operations are in progress,
- Any other area where signalization reminds that the use of cellular telephone is forbidden or dangerous.
- Any other area where you would normally be advised to turn off your vehicle engine.

There may be a hazard associated with the operation of your Fastrack GO Plug & Play close to inadequately protected personal medical devices such as hearing aids and pacemakers. Consult the manufacturers of the medical device to determine if it is adequately protected.

Operation of your Fastrack GO Plug & Play close to other electronic equipment may also cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.

The Fastrack GO Plug & Play is designed for and intended to be used in "**fixed**" and "**mobile**" applications:

- "**Fixed**" means that the device is physically secured at one location and is not able to be easily moved to another location.
- "**Mobile**" means that the device is designed to be used in other than fixed locations and generally in such a way that a separation distance of at least 20 cm (8 inches) is normally maintained between the transmitter's antenna and the body of the user or nearby persons.

The Fastrack GO Plug & Play is not designed for and intended to be used in portable applications (within 20 cm or 8 inches of the body of the user) and such uses are strictly prohibited.

7.2 Vehicle Safety

Do not use your Fastrack GO Plug & Play while driving, unless equipped with a correctly installed vehicle kit allowing 'Hands-Free' Operation.

Respect national regulations on the use of cellular telephones in vehicles. Road safety always comes first.

If incorrectly installed in a vehicle, the operation of Fastrack GO Plug & Play telephone could interfere with the correct functioning of vehicle electronics. To avoid such problems, make sure that the installation has been performed by a qualified personnel. Verification of the protection of vehicle electronics should form part of the installation.

The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

7.3 Care and Maintenance

Your Fastrack GO Plug & Play is the product of advanced engineering, design and craftsmanship and should be treated with care. The suggestion below will help you to enjoy this product for many years.

Do not expose the Fastrack GO Plug & Play to any extreme environment where the temperature or humidity is high.

Do not use or store the Fastrack GO Plug & Play in dusty or dirty areas. Its moving parts (SIM holder for example) can be damaged.

Do not attempt to disassemble the Wireless CPU®. There are no user serviceable parts inside.

Do not expose the Fastrack GO Plug & Play to water, rain or spilt beverages. It is not waterproof.

Do not abuse your Fastrack GO Plug & Play by dropping, knocking, or violently shaking it. Rough handling can damage it.

Do not place the Fastrack GO Plug & Play alongside computer discs, credit or travel cards or other magnetic media. The information contained on discs or cards may be affected by the Wireless CPU®.

The use of third party equipment or accessories, not made or authorized by Wavecom may invalidate the warranty of the Wireless CPU®.

Do contact an authorized Service Center in the unlikely event of a fault in the Wireless CPU®.

7.4 Your Responsibility

This Fastrack GO Plug & Play is under your responsibility. Please treat it with care respecting all local regulations. It is not a toy. Therefore, keep it in a safe place at all times and out of the reach of children.

Try to remember your Unlock and PIN codes. Become familiar with and use the security features to block unauthorized use and theft.

8 Online Support

Wavecom provides an extensive range on online support which includes the following areas of Wavecom's wireless expertise:

- the latest version of this document
- new versions of our Operating System user guides
- comprehensive support for Open AT[®]
- regulatory certifications
- carrier certifications
- application notes

To gain access to this support, simply visit our web site at <http://www.wavecom.com/fastrackGO> or click on the desired link in Page. Privileged access via user login is provided to Wavecom authorized distributors.